



## **Making Your Digital TV Cable Ready**

All TV's must have a built-in digital QAM and MPEG-4 tuner to work with the digital TV system

Most TV's manufactured in the United States have QAM and MPEG-4 tuners especially new Samsung, Vizio, and Sony TVs.

Certain models of the following TV's do not have a QAM tuner: Element, Hisense, Seiki, RCA, Westinghouse, Proscan and other brands may apply

Each TV has slight variations to programming and you can find the exact directions to program your TV via your TV Manufacturer's website or instruction manual.

- 1) Go to "Menu"
- 2) From here, go to "Set-Up"
- 3) If you are prompted to choose between "Off-Air/Antenna" and "Cable", choose "Cable"
- 4) Go to "Auto Program"
- 5) When you depress the "Auto Program" button your television will begin to automatically scroll through the channels. This can take between 5 – 30 minutes depending on the TV. Make sure you allow the auto programming to fully complete.
- 6) Save the changes and exit

### **If you have a Roku TV:**

- 1) Click on Home
- 2) Select Antenna
- 3) Press the \* button on the remote control to start programming if it doesn't begin automatically

If your TV is asking you to put in a code, please call the Manufacturer of your TV

Other things to check are that the coax cable wire is screwed in tightly to your TV and the cable jack and make sure the input/source is set to TV. If your TV is still not working, you will need a box for your TV. Please call our main office.

**P.O. Box 73 - Spring Lake, NJ 07762 - Tel: 800-801-3323**  
**[service@privatelinc.com](mailto:service@privatelinc.com) - [www.privatelinc.com](http://www.privatelinc.com)**